

Monteringsanvisning rund cylinder med 3212S behör

Utsidans cylinder



- ① Montera säkringsringen i spåret på utsidans cylinder.



- ② Skjut försiktigt på cylinderhylsan på utsidans cylinder. ASSA logotypen ska vara horisontell. Observera att hylsans bockade arm ska möta urtaget i cylinderns underkant.



- ③ Skjut på cylinderringen över kåpan från baksidan med en vridande rörelse.

Insidans cylinder




- ④ Se till att cylinderroddarnas pilar pekar nedåt på båda sidor. Skruva fast cylindrarna i dörren.



- ⑤ Montera skrvtäckaren i cylindern.



- ⑥ Vrid nyckeln så att den linjerar med spåret på skrvtäckarens högra sida. Vrid skrvtäckarens låsning från OPEN till LOCK. Ta ut nyckeln.

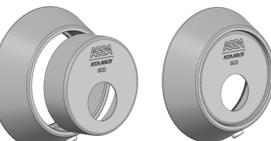

- ⑦ Montera cylinderhylsan i cylinderringen.



- ⑧ Skjut försiktigt på cylinderhylsan och ringen på insidans cylinder. ASSA-logotypen ska vara horisontell. Observera att hylsans bockade arm ska möta urtaget i cylinderns underkant.



- ⑨ Skjut insidans och utsidans cylinderring mot dörrbladet och dra åt stoppskruvorna.

Assembling instruction 3212S

Outside cylinder



- ① Assemble the retaining ring in the groove of the outside cylinder.



- ② Push the cylinder sleeve gently on to the outside cylinder. The ASSA logotype shall be horizontal. Please observe that the flanged arm shall align with the groove on the lower part of the cylinder.




- ③ Twist the cylinder ring over the sleeve from behind.


Inside cylinder



- ④ Make sure the arrows of the cylinder-follower are pointing downwards on both sides. Assemble the cylinders in the door.

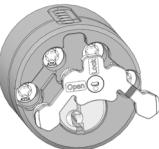

- ⑤ Assemble the screw protector inside the cylinder.

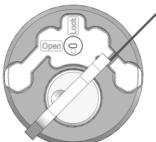

- ⑥ Make sure the key aligns with the mark on right hand side of the protector. Twist from position OPEN to LOCK. Remove the key from the cylinder.



- ⑦ Assemble the sleeve into the cylinder ring.



- ⑧ Push the cylinder sleeve and ring gently on to the inside cylinder. The ASSA logotype shall be horizontal. Please observe that the flanged arm shall align with the groove on the lower part of the cylinder.



- ⑨ Push the outside and the inside cylinder ring to the door leaf. Tighten the screws.