



702790 Måttanvisning / Measurements instruction

When frame is
flush to the door
(Strike A96)

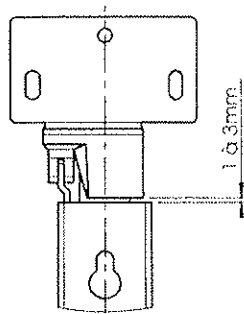

When frame
overlaps the door
(Strike A93)

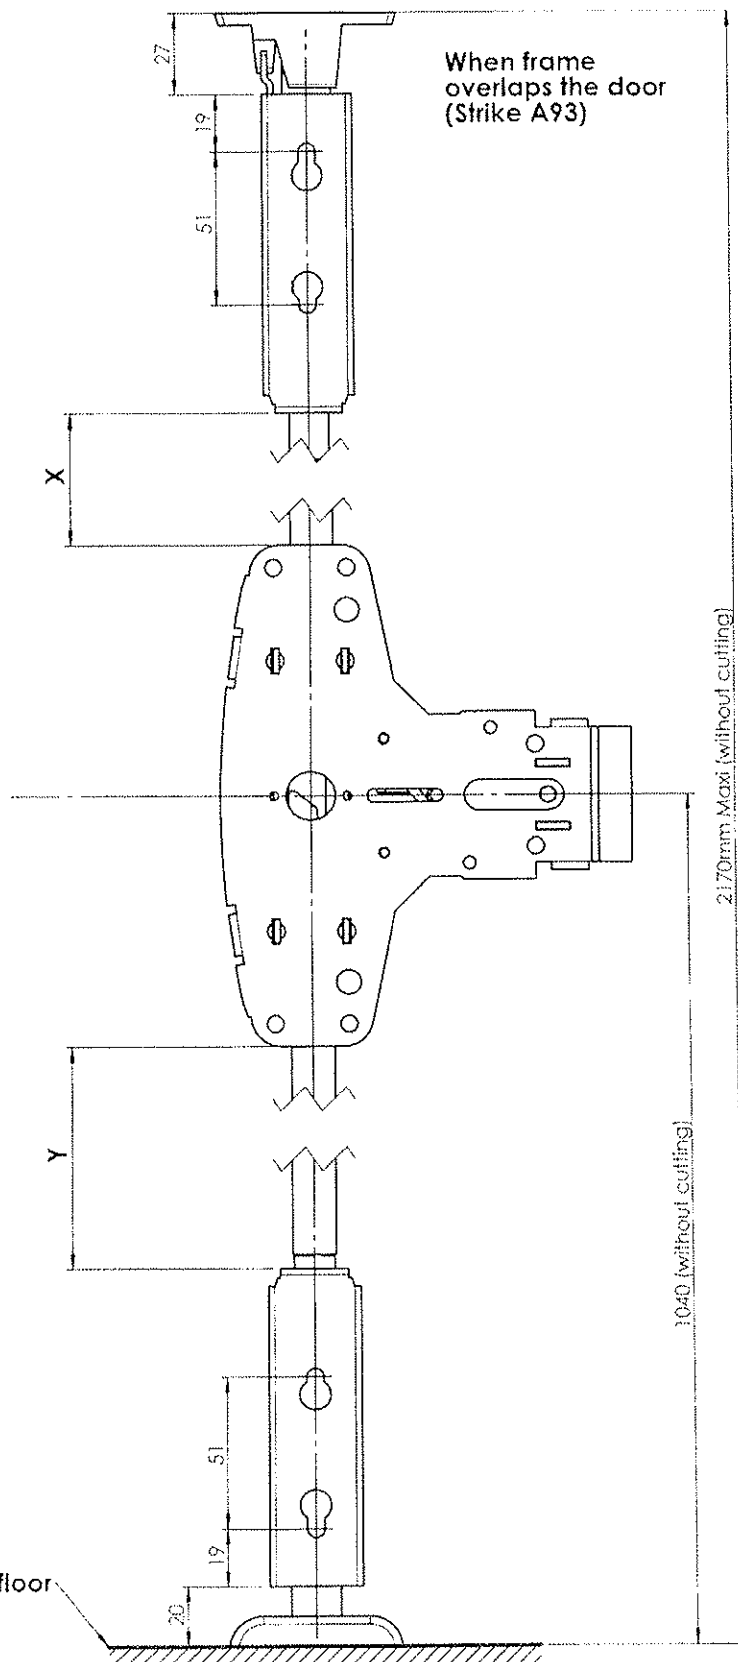

INSTALLATION OF THE RODS

Cut :
Top rod
 $L = X + 30\text{mm}$

Bottom rod
 $L = Y + 20\text{mm}$

INSTALLATION OF THE TUBES

Cut :
Top tube
 $L = X + 15\text{mm}$

Bottom tube
 $L = Y + 5\text{mm}$

ASSA AB
Doc.nr. 702790

ASSA AB 813762
Utgåva / Edition 5

091111